

|C|D|A|

# SL670BL

Thirteen function steam oven

Use and maintenance

# Contents

3	Important information	17	Descaling the steam system
5	First use of the oven	19	Practical tips
5	Standby mode	20	Temperature probe
6	Control panel	22	Rapid preheating
8	Heating functions and additional functions	22	Oven preheat
		22	Temperature
9	Function indicator symbols	23	Cooling fan and residual heat
9	Setting the time	23	Lighting
10	Child lock	24	Cleaning and maintenance
10	Minute minder	31	Changing the oven light bulbs
11	Display brightness	32	Installation
11	Oven door	34	Mains electrical connection
11	Delayed start	36	Technical assistance
13	Semi automatic cooking	37	Error codes
14	Automatic cooking	38	Specifications
15	Using the grill	39	Product fiche
15	ECO heating	40	Product information
16	Pre-set programmes		
17	Steam programme settings		

**IMPORTANT: Please read the user instructions carefully before using the appliance for the first time and before installing it. Failure to install the oven, or to have it installed, as per the instruction manual could invalidate the warranty. Any service calls relating to misuse or incorrect installation could incur a service charge.**

# Important information

This appliance must only be used for the purpose for which it is intended, i.e. domestic cooking. Any other use could be dangerous and may lead to premature failure of the appliance.

The CDA Group Ltd. cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserves the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

## User information

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements
- The appliance can be used by children aged from 8 years and above. Persons with reduced physical, sensory or mental capabilities must be given instruction or supervision concerning safe operation of the appliance and understand the hazards involved
- Do not allow anyone unfamiliar with the contents of this instruction manual to operate the oven
- Do not use harsh cleaning agents or sharp metal objects to clean the door as they can scratch the surface potentially resulting in cracking or shattering of the glass
- Take care when opening the oven door during or after a cooking cycle as hot steam may escape
- Do not use the oven in the event of a technical fault. Any faults must be fixed by an appropriately qualified and authorised person
- In the event of an incident due to a technical fault, disconnect the power and report the fault to CDA Customer Care
- The appliance has been designed only for cooking, any other use may invalidate your warranty and cause danger
- Do not place anything weighing over 15kg on the opened oven door

## Appliance information

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

<b>Appliance Model</b>	
------------------------	--

<b>Serial Number</b>	
----------------------	--

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2012/19/EU.**

At the end of its working life, the product must be taken to a special local authority waste collection centre or to a dealer providing appliance recycling services.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health. It also enables the constituent materials to be recovered, saving both energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin .



# First use of the oven

In order to remove oil residues accumulated during the manufacturing process and dust accumulated during storage and transport, we recommend a preliminary cleaning before first use. This is to protect your health and provide optimum quality in cooking.

## **IMPORTANT!**

Remove the protective foil from the telescopic runners before using the oven.

## **Preliminary heating**

1. Remove any packaging elements from the oven cavity
2. Turn on ventilation or extractor fan in the room or open a window
3. Set the oven to 250°C using the rapid preheating function
4. Allow to heat for approximately 30 minutes
5. Turn oven off and allow to cool
6. To clean the oven use a well wrung-out cloth with warm water and a small amount of washing up liquid
7. Dry with a clean cloth

A slightly unpleasant smell may be emitted during this process due to the vaporising of oil residue used to protect the oven during storage.


## **Standby mode**

Switching the appliance to standby mode resets all functions settings, times, temperature and automatic programmes. All heating elements are deactivated and the display is dimmed except for the timer.

To enter standby mode, press the ① sensor for 3 seconds at any time (this is applicable even if the oven is locked). A beep will be heard indicating the mode is active. To exit standby mode simply press the ① sensor for 3 seconds, a different beep will be heard to indicate the oven is now ready for operation.

# Control panel

The control panel is equipped with an LED display and backlit touch sensors.

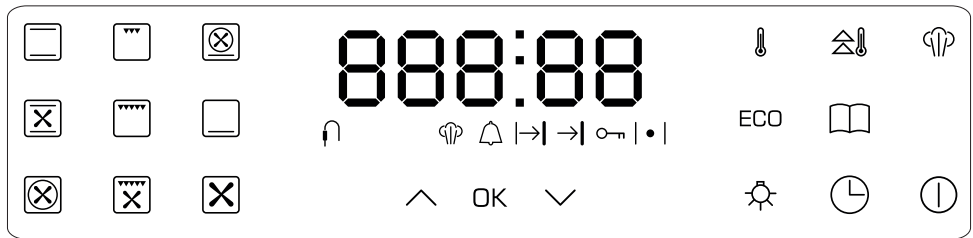

## Conventional oven

The thermostat enables the user to set the temperature within a range of 30°C to 280°C. This setting is ideal for baking cakes, meat, fish, bread. For best results preheat the oven and use a baking tray on one level.



## Half grill

This function radiates heat from the grill element. This fully temperature variable grill can be set between 30°C and 280°C maximum.



## Fan cooking with lower heat

With this setting the convection fan and bottom heater are on, which increases the temperature at the bottom of the cooked dish. Intense heat from the bottom is ideal for moist cakes and pizza.



## Fan assisted oven

This setting is most suitable for baking cakes.



## Full grill

In this setting both the grill and top element are engaged. This increases the temperature in the top part of the oven chamber making it suitable for browning and grilling larger portions of food. It can be set between 30°C and 280°C maximum.



### **Warming oven**

This function radiates heat from the bottom element, baking cakes from underneath until done.



### **Fan oven**

This function uses the circular heating element with a temperature between 30°C and 280°C. The fan then circulates the hot air which helps to achieve uniform heat distribution.



### **Fanned full grill**

This function radiates heat from the grill element and the top element but also uses the fan to circulate hot air. The hot air is distributed over and under the food that you are grilling. This fully temperature variable grill is ideal for grilling fish or other items where the appearance could be spoiled by a normal grill function. It can be set between 30°C and 280°C maximum.



### **Defrost**

This function uses the fan to circulate air at ambient temperature within the oven which helps to accelerate the defrosting process.



**On/off switch  
(standby)**



**Rapid preheating**



**Clock / Minute minder**



**Set temperature**



**Light**



**Plus sensor**



**Pre-set programmes**



**Minus sensor**

ECO

**Eco programme**
















OK

**Confirm sensor**



**Steam cleaning**

# Heating functions and additional functions

Function Description		Oven Elements						Temperature [°C]		Default Temperature [°C]
		Lighting	Top Heater	Roaster	Fan Heater	Bottom Heater	Fan	Min.	Max.	
Heating Functions										
	Conventional	✓	✓			✓		30	280	200
	Pastry	✓	✓			✓	✓	30	280	180
	Fan cooking	✓			✓		✓	30	280	180
	Grill	✓		✓				30	280	250
	Super grill	✓	✓	✓				30	280	250
	Turbo grill	✓	✓	✓			✓	30	280	200
	Pizza	✓			✓	✓	✓	30	280	220
	Roasting	✓				✓		30	240	200
	Defrosting	✓					✓	-	-	-
Additional Functions										
	Temperature	see manual for details								
	ECO baking	see manual for details						30	280	200
	Lighting	✓						-	-	-
	Quick oven pre-heat	✓						30	280	-
	Pre-set programmes	see manual for details								
	Steam programme	see manual for details								



## Function indicator symbols

 **Minute minder active**

 **Steam active**

 **Duration**

 **Temperature probe connected**

 **End time**

 **Child lock active**

 **Oven preheat**

## Setting the time

When the appliance is connected to power, the display will show the hour digits flashing, the minute digits will be illuminated.

- Use  $\wedge$  and  $\vee$  to set the hours. Touch **OK** to confirm the setting, the hour digits will now be illuminated and the minutes will be flashing
- Use  $\wedge$  and  $\vee$  to set the minutes. Touch the **OK** sensor to confirm the setting. The appliance enters sleep mode and the time set will be shown







**Note:** The time can only be set in 24 hour format

## Changing the time

The time display can only be changed when no other functions are being used.









If in sleep mode, press the on/off sensor  $\textcircled{1}$  to wake the appliance up. Once the display has illuminated, touch and hold  $\textcircled{2}$ . The  $\textcircled{3}$  symbol will flash on the display. Touch  $\textcircled{4}$  again and the digits will start to flash. You can now proceed to set the time following the steps in the 'Setting the time' section above.

## Child lock

The child lock is intended to prevent changes to the oven settings and the oven being turned on. When the appliance is on simultaneously touch and hold  and  for 3 seconds to activate the child lock. The  symbol will be illuminated. When the child lock is activated in standby mode it prevents the oven from being turned on. When the child lock is activated when the appliance is in use, it prevents the settings from being changed but the oven can still be turned off. To turn the child lock off simply touch and hold 3 seconds and the  and  sensors and the  symbol will go out.

## Minute minder

During a cooking function, only the minute minder can be set or adjusted. The clock or delayed cooking time can not be set or adjusted during the function.

- Touch and hold  and the display will show the  symbol
- Touch the  and  sensors to adjust the the setting and touch **OK** to confirm. The  symbol will be illuminated on the display, indicating the time is set. Touch and hold the  and  sensors to clear the setting
- Once the time has elapsed you will hear a beeping and the  symbol will be flashing. Touch the **OK** sensor to silence the beeping and end the function

The minute minder can be set for a maximum of 2 hours.

## Display brightness

The LED display brightness varies depending on the time of day. The display is dimmed during 22:00 to 06:00 and its brightness is normal during 06:00 to 22:00. Also, the display is brighter when active than when the appliance is in Standby mode.



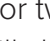
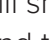
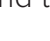

## Oven door



The oven door must be closed during operation. When you open the door you will interrupt the active oven function. If the door remains open for more than 90 seconds, you will hear a beep to prompt you to close the oven door. Touch any sensor or close the oven door to mute the beeping.



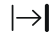

If you open the door for less than 5 minutes the active settings are unaffected. For safety reasons, after this time, the oven enters the standby mode (all settings are cleared).


## Delayed start (automatic on and off)

You can set the appliance to a delayed start and turn off when the duration has elapsed. The appliance will automatically turn on and off. You can delay the oven start from 1 minute to 10 hours, and set the duration for up to 10 hours.

You first need to set the duration. The display will show , then touch and hold the  sensor again and the minute minder, the  symbol will flash on the display. Next, touch the  sensor twice, and the  pictogram will flash on the display. The display will show the end time (start time + duration). Now use  to set the end time before touching **OK** to confirm.

Once the end time is confirmed, the  and  indicators light up steadily and the current time is shown again.









Use  /  to adjust the Start Time. Touch to confirm the adjusted setting. To cancel timed operation use  to adjust duration down to the lowest possible value and touch **OK** to confirm. When the oven is turns on automatically, the  symbol will go out.

When the duration has elapsed, you will hear beeping. Touch any sensor to mute the beeping. The beeping stops, the function settings and temperature are cleared and lighting will turn on for 30 s. The  symbol will go out. The appliance will turn off after another 60 seconds.



# Semi automatic cooking

This function allows for a cooking time to be set. When the set time elapses the oven will switch the set function off and an acoustic signal will sound to alert the user. The cooking time available ranges from between 1 minute and 10 hours.

## To switch on semi automatic cooking

- First select a heating function and temperature
- Touch and hold  and the  symbol will flash on the display
- Touch  again and the  symbol will appear on the display
- Use the  and  sensors to adjust the duration as needed, then touch **OK** to confirm the setting or alternatively wait 5 seconds and the duration will automatically set
- To clear the duration setting, simultaneously touch  and  and the display will show 0:00. Touch **OK** to confirm

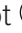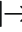


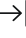






During the cooking process the  symbol will be illuminated.



Once the duration time has elapsed you will hear beeping. Touch any sensor except  to mute the beeping. The function settings and temperature will clear and the lighting will turn on for 30 seconds. The  symbol will go out and the appliance will turn off after 60 seconds.



# Automatic cooking

This function allows for a duration and an end time to be set for cooking. For example, if you set the cooking duration to 1 hour, and the end time to 15:00, then the oven will activate the function at 14:00.

## To switch on automatic cooking

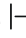- First select a heating function and temperature
- Touch and hold  and the  symbol will flash on the display
- Touch  again and the  symbol will appear on the display
- Use the  and  sensors to adjust the duration as needed
- Touch  and the  symbol will flash on the display and the end time will also be shown
- Use the  and  sensors to adjust the end time and touch **OK** to confirm the setting

During the cooking process both the  and  symbols will be illuminated.

Once the duration time has elapsed you will hear beeping. Touch any sensor except  to mute the beeping. The function settings and temperature will clear and the lighting will turn on for 30 seconds. The  symbol will go out and the appliance will turn off after 60 seconds.

# Using the grill

## Important!




When using any grill functions the oven door **MUST** be kept closed. When the grill is in use accessible parts can become hot and it is advisable to keep children away from the oven. When using the half grill, full grill or fanned grill functions the maximum temperature that can be set is 280°C.


















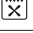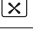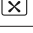

## ECO heating

ECO heating is an optimised heating function designed to save energy when preparing food. You cannot reduce the cooking time by setting a higher temperature; preheating the oven is not recommended. Do not change the temperature setting and do not open the oven door during cooking. The levels listed in the table below can be found around the edge of the oven cavity when the door is open

Type of dish	Oven function	Temperature °C	Level	Time (min)
Sponge cake	ECO	180 - 200	2-3	50 -70
Muffins	ECO	180 - 200	2	50 -70
Fish	ECO	190 - 210	2-3	45 - 60
Beef	ECO	200 - 220	2	90 - 120
Pork	ECO	200 - 220	2	90 - 160
Chicken	ECO	180 - 200	2	80 - 100


## Pre-set programmes

This oven features a number of pre-set programmes which create the ideal cooking environment (time, temperature etc.) for certain dishes. These can be accessed by pressing the  sensor and cycling through the programmes in the table below using the  and  sensors. Touch **OK** to confirm the programme and the oven will commence operation. The levels listed in the table below can be found around the edge of the oven cavity when the door is open.

Programme	Description	Rapid pre-heating	Heating Function	Level	Time [Min]	Temperature [°C]
P01	Beef			2	120	180
P02	Pork			2	120	180
P03	Lamb			2	120	180
P04	Chicken 1.5kg			2	85	190
P05	Duck 1.8kg			2	90	180
P06	Goose 3kg			1	130	170
P07	Turkey 2.5kg			1	155	170
P08	Pizza	✓		2	15	220
P09	Lasagne	✓		2	25	200
P10	Foccacia	✓		2	15	230
P11	Casserole with pasta	✓		2	15	220
P12	Baked vegetables	✓		2	35	180
P13	Sponge cake	✓		2	45	160
P14	Muffins			3	35	160
P15	Cookies			3	20	150
P16	Fruitcake	✓		2	55	175
P17	Bread			2	60	180
P18	Dough proving			2	20	30
P19	Dry			2/3	300	50




# Steam programmes


When the appliance is on, touch  to access the pre-set programmes menu – the pre-set programme P01 will be shown on the display. Use the  $\wedge$  and  $\vee$  sensors to select the programme marked as S01-S10.


The oven is equipped with special stainless steel bowls:

- perforated for vegetables and fish
- solid for meat

Place the steel bowls with food on the wire shelf. Close the oven door.

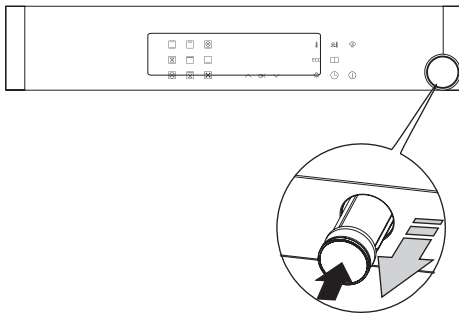


Water container drawer is located in the front panel. Push and then pull the container drawer. Pour 0.5 l of water into the container. (Add water if the  steam indicator is flashing) When there is enough water in the container you will hear a beep. Close the container drawer. Select the S01-S10 programme and touch OK to confirm and start the programme.

**IMPORTANT:** When you hear a beep during a programme and the  is flashing, you need to add more water. Proceed the same as you added water for the first time. The steam indicator will stop flashing when you have added enough water.

**NOTE:** When water runs out the programme is not interrupted!

When the set time has elapsed, you will hear beeping. Touch any sensor to mute the beeping. Touch OK acknowledge the completed programme. Open the door to the first position (about 15°). You can open the door all the way after a few seconds. Then place deep baking tray under the water drain.

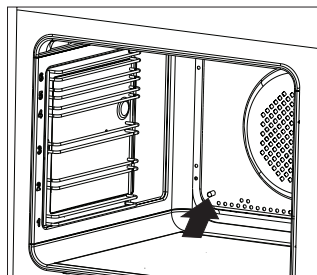

Press OK to drain the remaining water from steam system. Wipe oven cavity dry with a cloth. When you have run steam programmes several times, start the oven fan heater for 30 minutes at 180°C.

**NOTE:** Danger of burns! Hot steam may escape when you open the oven door. Be careful when you open the oven door during or after cooking. Do NOT lean over the door when you open it. Please note that depending on the temperature the steam can be invisible.

**IMPORTANT:** Ensure there is no water in the steam system when you use standard heating functions. Do not add water into the container drawer when using the standard heating functions.

# Steam programme settings

Programme	Description	Function	Temperature [°C]	Time	Level	Dishes
S01	Deep steaming	Steam 100%	100	50 mins	3	Vegetables, rice, creme brulee
S02	Steam & grill	25 mins	100	40 mins	3	Pasta casserole, Whole fish
		15 mins	220			
S03	Reheat & pasteurise	100%	90	25 mins	3	Jams, Chutney
S04	Low & slow	Steam injection	80	240 mins	3	Slow cooked meats
S05	Slow cooked tender meats	Steam injection	70	120 mins	3	Slow cooked delicate meat
S06	Bread	Steam 30 mins	50	60 mins	3	Bread
		Baking 30 mins	200			
S07	Roasted poultry	Roasting with steam injection	180	75 mins (roasting 60 mins)	3	Roasted poultry
S08	Roast & steam	Grill 20 mins	220	110 mins	3	Meat casserole, Ratatouille, One pot dishes
		Baking with steam injection 90 mins	120			
S09	Bake & steam	Baking with steam injection	150	120 mins	3	Pate, Fondant
S10	Descale	Descale				

## Descaling the steam system

When you have run several steam programmes, a flashing P10S message will be shown on the display. This message prompts you to descale the system. Select P10S from the list of pre-set programmes to descale the appliance.

You can skip descaling twice, by touching the ⓘ sensor. However, after 10 steam cook cycles the appliance will not allow you to run a steam programme again until you descale the appliance.

Descal the appliance.

- Prepare a solution of 450ml of water and 50ml of liquid descaling agent
- Pour the solution into the water container drawer
- Press OK to start the P10S programme

**NOTE:** During the descaling programme, you will need to drain water from the steam system 3 times.

Drain the descaling solution from the system when you hear a beep and steam indicator is flashing.

- Open the oven door
- Place the deep baking tray under the water drain
- Press OK to drain the remaining descaling solution from the steam system. Pour the solution out of the baking tray and rinse with water

To rinse the steam system, pour 0.5l of clean water into the water container drawer and touch OK to continue the steam programme.


Drain the descaling solution from the system when you hear a beep and steam indicator is flashing.

- Open the oven door
- Place the deep baking tray under the water drain
- Press OK to drain the remaining descaling solution from the steam system. Pour the solution out of the baking tray and rinse it with water

**IMPORTANT:** If water is dripping from the drain tube during the steam programme, flush the system.






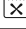
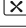
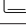

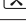

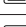


In the active oven mode without the function enabled:

- Place at least 1l container under the drain
- Pour 0.5l of water into the water container drawer
- Simultaneously touch ✓ and OK, drain water out of the system
- Repeat this procedure twice. If the problem persists, run another descale programme

**IMPORTANT:** If you notice scale draining from the steam system after the completed steam programme, select the P10S programme from the list and follow the descaling instructions. If you pour water into the container but decide not to run a steam programme, you can touch  and OK to drain water from the steam system. You can touch OK at any time to stop draining water.





## Practical tips



The times given in the table below apply to a dish that is placed in to a cold oven. For a preheated oven the times should be reduced by 5 - 10 minutes. The figures given below are approximate and can be altered based on your own experience and cooking preferences. The levels listed in the table below can be found around the edge of the oven cavity when the door is open. For meat and fish dishes, the food being cooked can be placed directly on the shelf of level 2 with a roasting tray on level 1 for collecting droplets dripping from the meat or fish.

Type of dish	Heating Function	Level	Time [Min]	Temperature [°C]
Beef		1 - 2	120 - 150	225 - 250
Beef		1 - 2	120 - 160	160 - 180
Beef		1 - 2	100 - 150	180 - 190
Pork		1 - 2	90 - 150	160 - 230
Pork		1 - 2	90 - 150	160 - 190
Pork		1 - 2	100 - 150	180 - 190
Chicken		1 - 2	70 - 90	180 - 190
Chicken		1 - 2	45 - 60	160 - 180
Chicken		1 - 2	60 - 70	175 - 190
Fish		1 - 2	60 - 70	190
Fish		1 - 2	45 - 60	210 - 220
Fish		1 - 2	45 - 60	160 - 180
Vegetables		2	40 - 50	190 - 210
Vegetables		3	40 - 50	170 - 190

# Temperature probe

This oven comes with a temperature probe which allows you to cook food until it is a certain temperature inside. To use the temperature probe, simply follow the steps below:

- Remove the protective cap from the oven probe socket in order to insert the end marked 'O' (Fig. 2) into the oven probe socket, located on the right side of the oven cavity (Fig. 1). Push the probe in until it clicks and sits firmly and the probe indication  switches on on the display panel
- Insert the end marked 'T' (Fig. 2) into the food to be cooked
- If you switch the oven, or a function, on with the temperature probe already plugged in you will be prompted to enter the desired probe temperature first. If you plug the temperature probe in after activating a function, then you will be prompted to enter the desired temperature
- The display will show the target temperature flashing on the left (default 75°C) and the current probe temperature on the right. Use  and  to adjust the target temperature and touch  to confirm or wait 5 seconds to abort and restore the previous setting

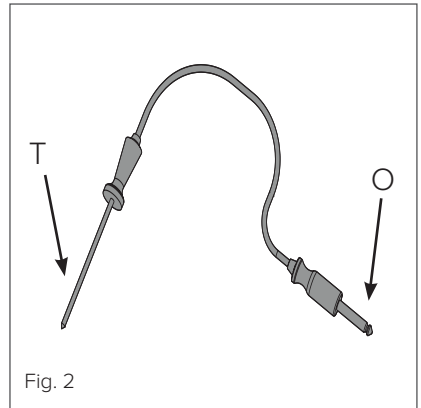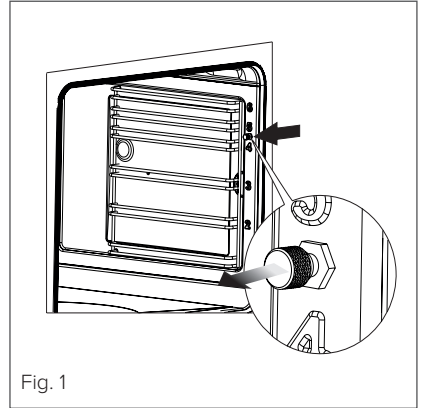

- Once the set probe temperature has been reached, the function will switch off. If you are using a programme with a duration (e.g. semi-automatic cooking) as well as the temperature probe, then the function will operate until the first condition to end the programme is met, i.e. until the probe temperature is reached or duration has elapsed

Below are recommended temperatures depending upon the type of meat being cooked in conjunction with the temperature probe.




Type of meat	Ideal temperature °C
Pork	85 - 90
Beef	80 - 85
Veal	75 - 80
Lamb	80 - 85
Venison	80 - 85

**Please note:**

- You must only use the temperature probe approved for this oven.
- Always check that the food being cooked is done thoroughly before serving it to anyone.
- If you need to remove the temperature probe mid-function, ensure that you wear adequate PPE (Personal Protective Equipment) for the task (e.g. protect your hands, arms and face).
- Removing the temperature probe mid-function will cause the oven to go into an error state and stop the function.
- Some preset programmes require the temperature probe to be present or removed. Prompts will be displayed in cases such as these. You have approximately 1 minute to do as prompted before the oven cancels the selection.

## Rapid preheating


The rapid preheating function allows the oven elements to work at their maximum capability in order to get the oven to temperature as quickly as possible. To use the rapid heating function, follow the steps below.

- First select a heating function and temperature
- Touch the  sensor and the function will start
- The  sensor will be illuminated until the temperature set has been reached, upon which the sensor will go out and the function will stop
- The function can be turned off at any time by pressing 

## Oven preheat

When the |•| symbol is illuminated, it indicates the oven is heating up towards the temperature set. The |•| symbol will go out once the temperature is reached. To show the set temperature is being maintained The |•| symbol will illuminate and go out periodically.

## Temperature




At any time during a heating function, it is possible to find out what temperature the oven is currently operating at. Simply touch the  sensor to see what the temperature inside the cavity is. Touch the sensor a second time and the display will show the temperature which has been set. Touch the sensor a third time and the display will revert back to the current time.



## Cooling fan and residual heat

If the oven has no active functions but the temperature inside is still above 80°C, the cooling fan will activate automatically until the temperature decreases. During this cooling period the display will show the current temperature until the oven has cooled sufficiently.

## Lighting

The lighting inside the cavity of the oven can be turned on at any time during an active function by pressing the  sensor. The light will stay on for 30 seconds but can be switched on permanently if the  sensor is pressed for 3 seconds. To deactivate simply press the  sensor again for 3 seconds.

# Cleaning and maintenance

Keeping your oven clean and well maintained helps to prolong its fault-free lifespan. It is important that, before any cleaning or maintenance is performed, you switch off the oven at the mains supply. Do not start any cleaning or maintenance until the oven has been allowed to cool completely.

**We recommend always wearing PPE (Personal Protective Equipment) when carrying out any cleaning or maintenance.**

## **Cleaning the oven exterior**

Stainless steel, aluminium and glass surfaces can all be cleaned using a dilute solution of water and mild detergent. They must be cleaned very carefully using a soft or microfibre cloth to avoid scratching and abrasions. Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings. Always dry thoroughly with a soft dry cloth.

## **Cleaning the oven interior**

The oven should always be cleaned after use when it has been allowed to cool down. The cavity should be cleaned using a mild detergent solution and warm water and then wiped dry with a suitable clean cloth.

## **Cleaning the temperature probe**

The temperature probe should be cleaned using warm soapy water and a clean cloth, The temperature probe is not suitable for use in a dishwasher

# Cleaning and maintenance

Abrasive cleaning agents or scouring pads/cloths should not be used on the cavity surface.

## **IMPORTANT:**

- **Steam cleaners must not be used when cleaning this appliance**
- **Once care and maintenance is complete, ensure that all parts are correctly replaced before using the oven**

## **Removing the appliance door**

In order to allow easier access into the oven cavity for cleaning, it is possible to remove the door. Before removing the door, ensure that you have an area prepared in which you can place the removed door. This area should ideally be protected by something like a folded, dirt-free, towel to help prevent damage to surfaces and the door.

- Open the door fully
- Lift and tilt the safety catch part of the hinge (Fig. 3) so that it is fully extended and points towards the door
- Close the door most of the way, lift it slightly and then pull it, safely but firmly, towards you



Fig. 3

# Cleaning and maintenance

## Replacing the appliance door

- Hold the door to the appliance in the closed position and manoeuvre the hinges so that the part of the hinge, highlighted by the arrow in fig. 4, inserts into the hinge slot in the cavity frame
- Next, ensure the notch on the underside of the hinge sits on the lip of the hinge slot. Open the door fully. Each hinge should be seated in the same way as the hinge in fig. 5. If it is not, follow the steps for removing the door and try replacing it again
- Finally, lift the safety catch part of the hinges back into place so that they are lying flat against the hinges

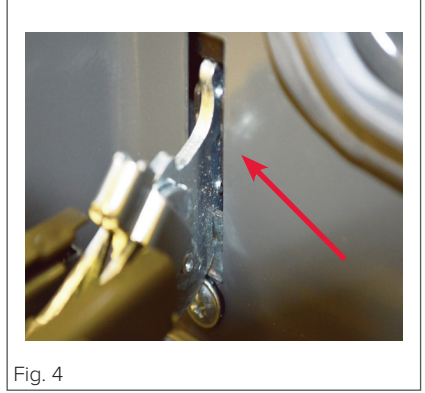


Fig. 4

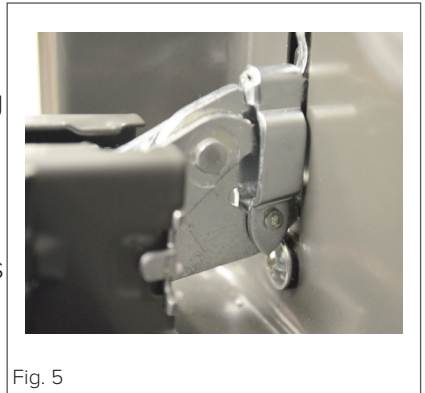


Fig. 5

**Please note: If the hinge safety catches are not in the correct place then the door and/or appliance may receive damage when attempting to close the door.**



# Cleaning and maintenance

**Important: Do not disassemble the door without it having been removed from the oven. Weight differences could cause the door to snap shut, causing damage to the oven and/or the user**

## Removing the inner door glass

With the door removed, the inner glass can also be taken out for cleaning purposes.

- Squeeze the locking tabs on either side of the oven door, freeing the door slat as per fig. 6
- Remove the door slat, as per fig. 7, and place it somewhere safe where it will neither receive nor cause damage
- Remove the inner glass from the blocks it is seated within (near the hinges) and place this somewhere safe also. Pay attention to the way that the glass is facing as it will need to be replaced in the same direction. The smooth surface of the glass should be facing upwards (inwards if the door was back in place) with the patterned side facing the oven door handle
- Clean the door glass with warm, soapy water and wipe dry with a clean microfibre cloth

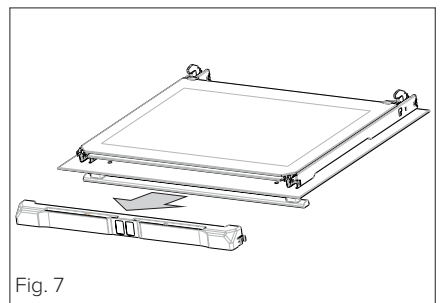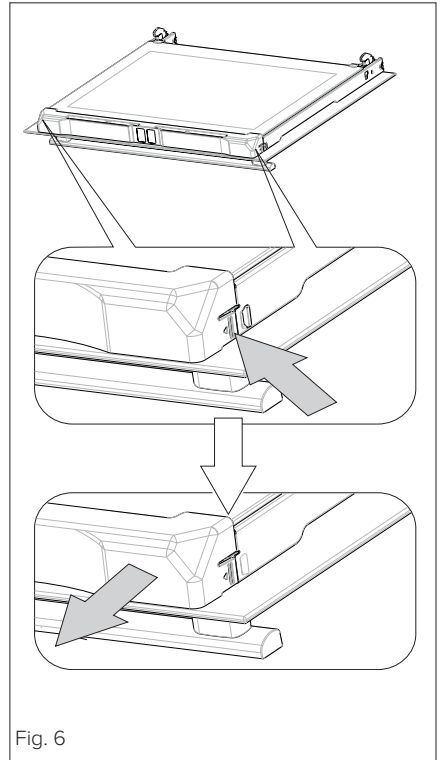

# Cleaning and maintenance

- The middle pane of glass can also be removed but it is important that this pane is reinserted facing the same way that it was when removed
- There are a number of rubber guides attached to the inner pane and these must be returned to their original positions when reassembling the door. Fig. 8 shows these guides and their position on and around the inner glass
- Simply reverse these steps in order to reassemble the door. Take care when reattaching the upper door cover. Place the left side on first until you hear a 'click' as it connects and then attach the right side. This will help to avoid damaging the door and/or glass

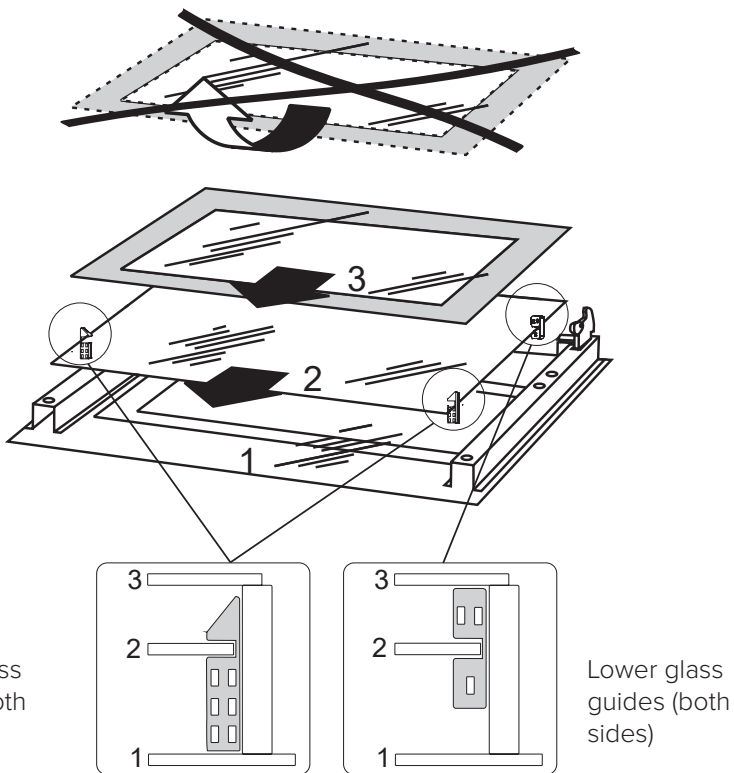




Fig. 8

# Cleaning and maintenance

This oven is equipped with telescopic runners allowing you to remove large or heavy items from within the oven cavity safely and easily.

## Removing the telescopic runners

- Offer your index finger up to the lower clip and rest your thumb on the upper clip as shown in fig. 9 below
- Pull upwards on the lower clip to release it from the side rack and the upper will also be free
- Repeat the process for the front and rear clips
- To reinstall the telescopic runners simply offer up the bottom clips to the side rack and gently ease the upper clips back on to the rack as shown in fig. 10

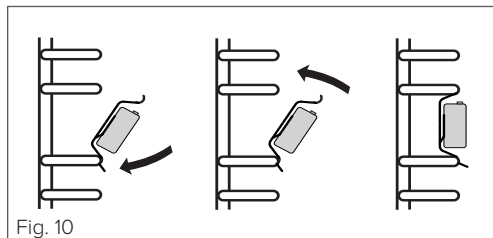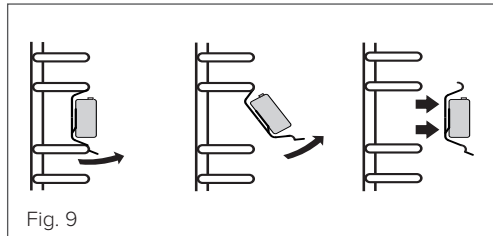

### Important!

**The telescopic runners should be removed before the shelf supports. The telescopic runners are not suitable for use in a dishwasher.**

# Cleaning and maintenance

## Important:

**Before carrying out any maintenance, always remember to allow the oven to cool completely if it has been in use.**

## To remove the shelf supports

- Take a firm hold of the shelf support in the middle. Place your thumb against the oven wall and lever the support out of the support holes (Fig. 11)
- Tilt the shelf support outwards and you should then be able to remove the shelf support arms that secure it into the cavity walls at the back (Fig. 12)

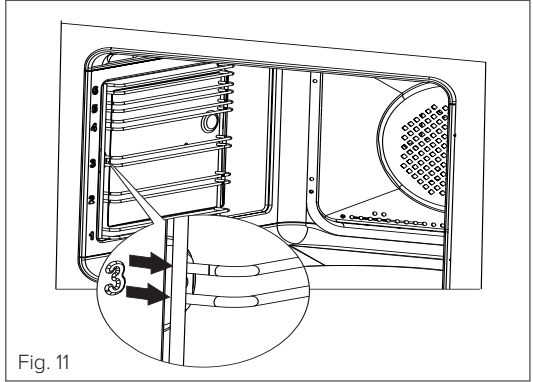


Fig. 11

## To replace the shelf supports

- Simply carry out the above steps, but in reverse order

## Please note:

Take care not to damage the enamel walls of the oven, particularly around the shelf support arm holes.

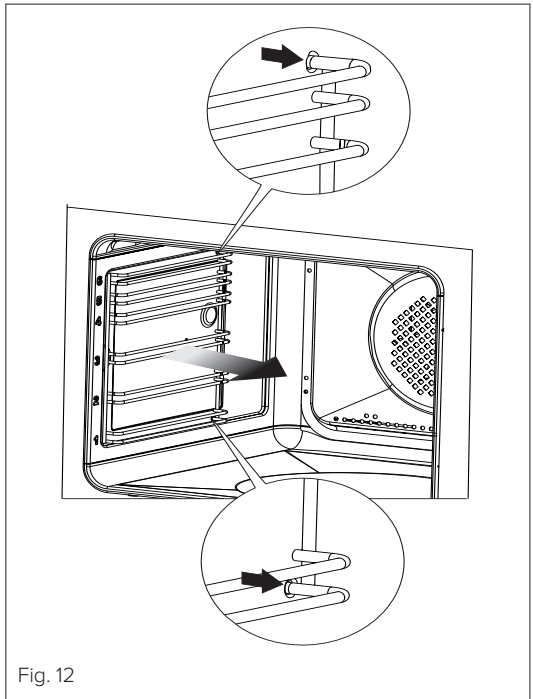


Fig. 12



# Changing the oven light bulbs

## Important:

**Before starting any maintenance procedures, please ensure that the appliance is disconnected from the mains electrical. If the oven has been in use, allow it to cool down before proceeding.**

**Never use screwdrivers or other utensils to remove the light cover; This could damage the enamel of the oven or the lamp holder. Remove only by hand.**

**Never touch the bulb with bare hands, as contamination from your fingers can cause premature failure. Always use a clean cloth or gloves. Old bulbs may still be hot!**

## Changing the bulb (Fig. 13)

- Remove all the pans, telescopic runners and shelf supports as shown on pages 27 and 28
- Carefully detach the glass cover by applying pressure with your thumb to one side whilst holding the other side with your fingers.
- Carefully remove the old bulb and insert a new bulb suitable for high temperatures (300°C) of the following specification; 230-240V~, 50Hz, 25W, G9 fitting
- Refit the glass cover cover

## Please note:

The bulb replacement is not covered by your guarantee.

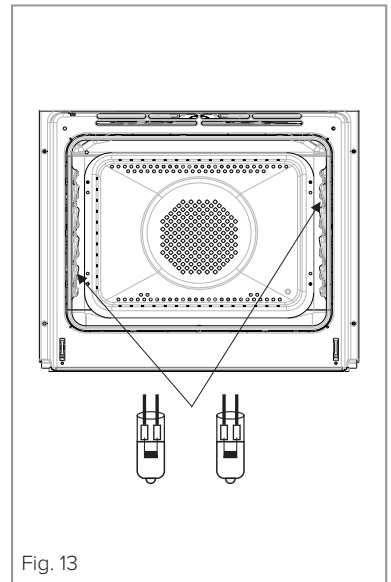


Fig. 13

# Installation


**Important! If installing this oven below a hob, please ensure that the required air gap between the two appliances is observed. This gap is usually detailed in the instruction manual provided with your hob.**

**The installation of this appliance must be carried out by a suitably qualified person. We recommend seeking the help of another person for the installation process.**

**Do not install the oven in the direct vicinity of refrigerators or freezers. This could cause increased energy consumption.**

If the oven is being installed into a built under oven housing unit, ensure that the front rail at the top of the unit is not installed as it could restrict ventilation.

Ensure that air can flow freely around the housing area. If the oven is being installed into a fully enclosed built-under oven housing unit it may be necessary to cut a small slot in the top of the plinth fitted under the unit. Cut a section 400mm wide and a minimum of 15mm high to allow air to pass under the unit. Alternatively cut a section 400 x 450 mm in the base of the carcass shelf as indicated in Fig. 14. Failure to allow adequate ventilation to the appliance may result in overheating or damage to adjacent units and could invalidate the warranty.

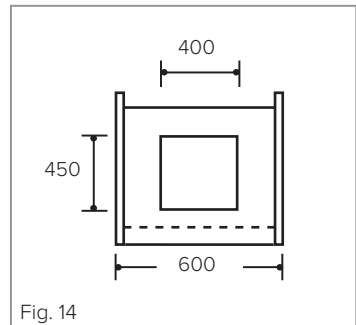

This appliance is type X installation.

# Installation

The walls of the kitchen units must be able to withstand temperatures of 75°C above ambient (typically this is between 90°C and 100°C). When correctly installed ensure that there is a gap of 4mm minimum between the sides of the oven and adjacent furniture doors.

## How to install your oven

You will need the housing area in Fig. 15 to fit your oven correctly. The oven is designed to fit into a cabinet of 600 mm width. The oven can be built in or built under the kitchen units, but you must ensure that it is properly ventilated. In the diagram below the built-in oven is ventilated by means of a space at the top of the kitchen cabinet. There are many other methods of ventilating your oven - consult a qualified engineer for advice.

Lift the oven carefully into position on the shelf, taking care NOT to lift it by the door handle. If you lower the oven door, you will see 4 screw holes, 2 on each side of the oven (image B fig. 15). The oven should then be secured to the housing by securing screws into these holes. Remember the housing should not be free-standing but be secured to the wall and/or adjacent fittings.

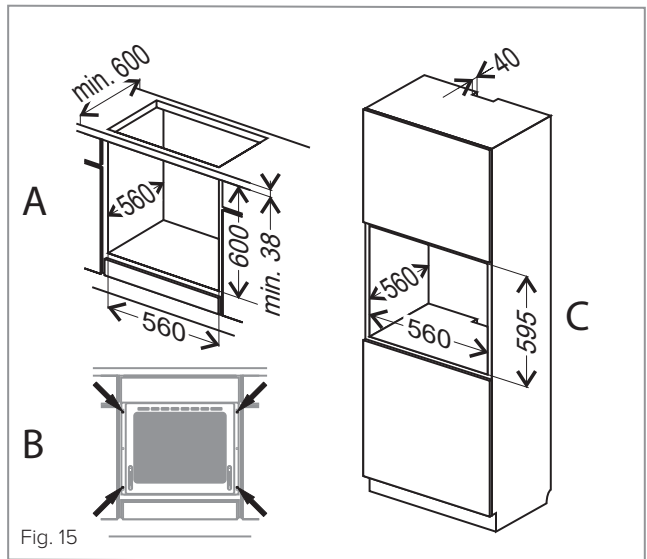


Fig. 15

Remember the housing should not be free-standing but be secured to the wall and/or adjacent fittings.

# Mains electrical connection

## **Warning! This appliance must be earthed.**


This appliance must be connected by a competent person, using fixed wiring via a double pole switched fused spur outlet, protected by a 13A fuse.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.T. and local regulations. The wires in the mains lead are coloured in accordance with the following code:

**GREEN AND YELLOW = EARTH**  
**BLUE = NEUTRAL**  
**BROWN = LIVE**

As the colours of the wires in the mains lead for the appliance may not correspond with the coloured markings identifying the terminals in your spur box, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the terminal marked E (Earth) or coloured green
2. The wire which is coloured blue must be connected to the terminal marked N (Neutral) or coloured black
3. The wire which is coloured brown must be connected to the terminal marked L (Live) or coloured red

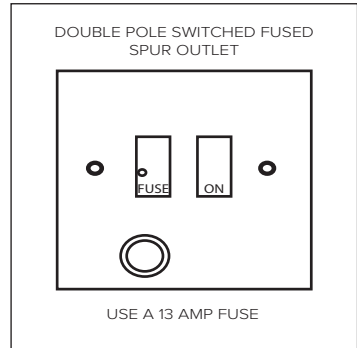

# Mains electrical connection

## **Please note:**

- The mains cable must only be replaced by a qualified electrician or service engineer and must be of equivalent or better rating (i.e. 3 x 1.5 mm<sup>2</sup>, HO5VV-F)
- This appliance is intended to be connected to the mains supply with a cable of cross sectional area 1.5 mm<sup>2</sup>
- The current rating of the fuse or circuit breaker protecting this appliance should be marked on the socket outlet
- Assembly and electrical connection should be carried out by specialised personnel
- When installing this product we recommend you seek the help of another individual
- Should the mains cable be damaged or need to be replaced, it should only be done so by a qualified electrician or engineer. The terminal block on the appliance is clearly marked with regards to the positions of live, neutral and earth

Appliance electrical rating: 2800W

# Technical assistance

In the event of your appliance requiring technical assistance and/or spare parts, please contact CDA Customer Care. For more information about the warranty of your product, including terms and conditions, please visit [www.cda.eu/warranty](http://www.cda.eu/warranty)

## CDA Customer Care

**Phone:** 01949 862 012

**Email:** [customer.care@cda.eu](mailto:customer.care@cda.eu)

In this case it is necessary to state all the appliance data on the rating plate, such as model, serial number etc. This information can be found on the outer rim of the oven chamber when the door is opened and also on the back or side of the exterior of the oven.

Problem	Reason	Solution
The appliance does not work	No power	Check the fuse, replace if blown
Oven lighting does not work	Loose or damaged bulb	Replace bulb if blown (see page 29)
Display shows 0.00	The oven was disconnected from the mains or there was a temporary power cut	Set the current time (see page 8)
Fan does not work	Risk of overheating! Unplug the appliance immediately or switch off the main circuit breaker. Contact the Customer Care Department	

If the problem is not solved, disconnect the power supply and report the fault.

**Important!** All repairs must be performed by qualified service technicians. The use of engineers not approved by CDA may invalidate any warranty provided.

## Error codes

If any errors are detected within the appliance, the programme is interrupted and an error code is shown on the display.

Typically an error code is the letter E followed by a number.

In the event of an error code being displayed, note the code displayed and contact CDA Customer Care for advice.

# Specifications

Model	SL670BL	12247.3eTtepKDpsScJVUtS
Oven Dimensions (HxWxD)	595 x 595 x 570 mm	
Rated voltage	220-240V~ 50/60Hz	
Total rated input	2800 W	




This product meets the requirements of British and European standards

BS EN 60335 -1; BS EN60335-2-6.

The data on the energy labels of electric ovens is given according to standard EN60350-1 / IEC60350-1. These values are defined with a standard load with the following functions active:

**Bottom and top elements (conventional heating) and fan assisted heating (forced air heating), if these functions are available.**

The energy efficiency class was assigned depending on the function available in the product in accordance with the priority below:

Forced air circulation ECO (ring heater & fan)	
Forced air circulation ECO (bottom element + top + grill + fan)	
Conventional mode ECO (bottom element + top)	



## Product fiche

The information in the product data sheet is given in accordance with the Commission Delegated Regulation (EU) NO 65/2014 supplementing Directive of the European Parliament and of the Council 2010/30/EU with regard to energy labelling of household ovens and range hoods.

Supplier name	CDA
Model identifier	SL670BL
	12247.3eTtepKDpsScJVUtS
Energy efficiency index (EEI cavity)	81.6
Energy efficiency class	A+
Energy consumption per cycle (EC electric cavity)	0.99
Conventional mode [kWh]	0.71
fan-forced mode [kWh]	
Number of cavities	1
Heat source (electricity or gas)	Electric
Cavity volume (L)	77

**In order to determine compliance with the eco-design requirements, the measurement methods and calculations of the following standard were applied:**

BS EN 60350-1

# Product information



Product information given in accordance with Commission Regulation (EU) No 66/2014 supplementing Directive of the European Parliament and Council Directive 2009/125/EC with regard to eco-design requirements for household ovens, hobs and range hoods.

Model identifier	SL670BL  12247.3eTtepKDpsScJVUtS
Oven type (electricity or gas)	Electric
Appliance weight [kg]	33.7
Number of cavities	1
Heat source (electricity or gas)	Electric
Cavity volume (L)	77
Energy consumption needed to heat a standard charge in an electric oven cavity during a single cycle in conventional mode for each cavity (final electric energy consumption) EC electric cavity [kWh/cycle]	0.99
Energy consumption needed to heat a standard charge in an electric oven cavity during a single cycle in fan-forced mode for each cavity (final electric energy consumption) EC electric cavity [kWh/Cycle]	0.71
Energy efficiency index EEI cavity	81.6

Certificate of compliance CE and UKCA.

The Manufacturer hereby declares that this product complies with the general requirements pursuant to the following European Directives and analogous UK requirements :

- The Low Voltage Directive 2014/35/EC / Electrical Equipment (Safety) Regulations 2016.
- Electromagnetic Compatibility Directive 2014/30/EC / Electromagnetic Compatibility Regulations 2016.
- ErP Directive 2009/125/EC / The Ecodesign for Energy-related Products Regulations 2010 (as amended) for the applicable implementing measures which apply in Great Britain and Northern Ireland, respectively.

and therefore the product has been marked with  and  symbols and the Declaration of Conformity, the Manufacturer has drawn up the declaration and is available to the competent authorities regulating the market.

## Notes

**The CDA Group**

Harby Road

Langar

Nottinghamshire

NG13 9HY

**Sales Department**

**Phone:** 01949 862010

**Email:** [sales@cda.eu](mailto:sales@cda.eu)

**Customer Care Department**

**Phone:** 01949 862012

**Email:** [customer.care@cda.eu](mailto:customer.care@cda.eu)

